# ATLAS

# by Ambiance

Large Format Tile Installation Guide



Atlas stone is a private label product under the Ambiance brand of fireplace products and accessories marketed exclusively for members of the United Buyers Group. Atlas stone is manufactured by Norstone, a premium natural stone wall veneer manufacturer making products for residential and commercial projects worldwide since 2002.

## Table of Contents

Introduction to Atlas Stone	3
Estimating Stone Required	3
Professional Installation Recommended	3
Tools and Material Needed	4
Preparing Your Substrate for Installation	4
Installing Over Open Stud Walls	4
Installing Over Block, Brick, CMU, or Poured Concrete	5
Installing Over Steel	6
Installing the Atlas Stone Large Format Tiles	6
How to Address Corners	7
Special Note on Moisture Rich Environments and Freeze Thaw Climates	8
Post Installation Guidelines	8
Cleaning	8
Sealing	9
Ongoing Maintenance	9
Disclaimer	10
Warranty	11
Appendix A - Substrate Detail	12

### Introduction to Atlas Stone

Atlas Stone Large Format Tiles are produced by Norstone Pty Ltd., of Sydney Australia. For more information not contained in this document, contact your local Norstone distributor for assistance. Atlas Stone Large Format Tile products are designed to offer a large scale linear looking natural stone veneer option, open to being set in a variety of patterns. Atlas Stone Large Format Tiles adhere to the following physical properties

STONE CLASSIFICATION: Basalt, Quartz, or Lavastone

COLOR: Caldera, Moonstone, Snowdrift, Lavarock & Luxotic

<u>SIZE</u>: Each Atlas Stone Set consists of three loose strips of stone. Each strip is 31.5" long, and each set will have one strip at each of the following heights, 5.5", 3.1", 2.4". All strips are .8" thick and each set covers 2.4 sq ft.



WEIGHT: approx 12.5 lbs per sq ft, or 30 lbs per set.

<u>PACKAGING:</u> 1 set = 2.4 sq ft.; 63 sets per crate = 151.2 square feet per crate **Estimating Stone Required** 

Determine the amount of the Atlas Stone Large Format Tile to be ordered by measuring the area to be covered. Measure the length times the height to determine the square footage required. Subtract the square footage for window and door openings. Always allow a minimum of 10% for error and wastage when ordering. **Professional Installation Recommended** 

ATLAS Wide Format Stone Veneers can be installed by most home handyman with a limited knowledge of building and construction; however we strongly recommend they be installed by professional licensed tradesmen.

Return to Table of Contents

page 3 of 17 © 2018 Norstone USA 11/28/2018

#### **Tools and Material Needed**

[1] For cutting and modifying Atlas Stone Large Format Tile, a quality tile wet saw with a continuous rim diamond blade is required and should tilt if miter cuts are necessary; these are usually available for hire on a daily basis from large equipment hire firms in your area. [2] An angle grinder may be used for around small protrusions in the wall such as pipes, steelwork etc. [3] Steel trowel, [4] 1/2" (half-inch) notched trowel, [5] large sponge, and [6] recommended tile thinset adhesive, meeting or exceeding ANSI 118.4 & 118.11 standards.

**Optional materials** that **may be required**, depending on the substrate and application include:

Metal Lath Thick Bed Mortar Waterproofing Membrane Grout and Grout Spacers Natural Stone Sealer

Return to Table of Contents

#### **Preparing Your Substrate for Installation**

It is mandatory that local building codes be followed in the installation of Atlas Stone Large Format Tile. Please consult your building authority with any specific questions relating to the local building codes.

Atlas Stone Large Format Tiles weigh approximately 12.5 lbs per sq ft; therefore it is critical that they are fixed to an appropriate substrate to ensure a successful installation. Atlas Stone Large Format Tiles may be applied over any masonry surface, concrete block, brick, cement, etc. Painted surfaces must be sandblasted, or otherwise stripped of paint. If a new wall needs to be built of a thinner and lighter substrate, cement board is the correct material to use. ATLAS Wide Format Stone Veneer SHOULD NOT be installed over drywall or sheet rock.

All walls should be checked for plumb and corrected as necessary to within 1/8" tolerance over 10' and no more than 1/16" tolerance in any 2'.

#### nstalling Over Open Stud Walls

Atlas Stone Large Format Tiles can be installed over open stud walls using either cement board or a combination of wood sheathing, metal lath, and scratch coat. First ensure the wood or steel frame is structurally capable of supporting the weight of the Atlas Stone Large Format Tiles.

page 4 of 17 © 2018 Norstone USA 11/28/2018 If using cement board, it must be a minimum of 1/2" thick to support the weight of the Atlas Stone Large Format Tiles and must be securely fixed to the framework of either wood or steel. We suggest that the board be glued and screwed to the frame. First, cover the entire frame, where contact with the cement board is made, with a good quality mastic type adhesive and then fix the cement board to the frame, screwing at 24 inch centers using screws that are a minimum of 2 inches long. To ensure safety, strength and permanent fixing, this work should only be done by a qualified and licensed builder. If project is either exterior or will be exposed to moisture, a waterproofing / anti fracture membrane, to comply with ANSI 118.10 will be required between the cement board and the setting material.

If using wood sheathing, it must be exterior grade and covered with an exterior sheathing product such as 15 lb builders felt or 4 mil polyethylene. A 3.4# galvanized diamond wire metal lath is then to be affixed to the substrate per manufacturer's recommendations and then covered with a thick bed mortar mix. If project is either exterior or will be exposed to moisture, a waterproofing / anti fracture membrane, to comply with ANSI 118.10 will be required between the scratch coat and the setting material.

Please refer to Appendix A for detailed substrate drawings over open stud walls. <a href="Installing">Installing</a>
Over Block, Brick, CMU, or Poured Concrete

First ensure that the surface is clean and free of any foreign agents, including paint that may interfere with the bond between stone and substrate. This may require light sandblasting or waterblasting.

\*\* Special note for pre-fabricated concrete tilt up construction – all release agents must be removed from concrete surfaces prior to Atlas Stone Large Format Tile installation.

Next, in all installations over brick, or over other concrete substrates with uneven surfaces, a thick bed mortar mix is troweled onto the substrate to even out any inconsistencies in the substrate and provide a mortar base with which to adhere the setting material to. If the project is either exterior or will be exposed to moisture, a waterproofing / anti fracture membrane, to comply with ANSI 118.10 will be required between the mortar bed and the setting material.

Please refer to Appendix A for detailed substrate drawings over concrete substrates.

#### **Installing Over Steel**

First ensure that the surface is clean and free of any surface contamination, such as rust, dirt, paint, and manufacturing oils. Refer to the steel manufacturer's guidelines for adequately removing all manufacturing oils as to not interfere with the bond between Atlas Stone Large Format Tiles and substrate. If possible, tack weld a wire lath onto the steel in accordance with ANSI A108.0 – 3.3 standards. Once the lath is in place, a thick bed mortar mix is troweled onto the steel to fully cover the lath and form a suitable bonding substrate with which to adhere the setting material to. If the project is either exterior or will be exposed to moisture, a waterproofing / anti fracture membrane, to comply with ANSI 118.10 will be required between the mortar bed and the setting material.

Alternatively, Atlas Stone Large Format Tiles can be adhered directly to a contaminant-free steel substrate using an epoxy based tile adhesive meeting or exceeding ANSI 118.3

Atlas Stone by Norstone Large Format Tile Installation Guide page 5 of 17

standards. This method should only be used when tack welding wire lath and creating a mortar bed on the steel substrate is not feasible. A waterproofing / anti fracture membrane is not required in this method.

Please refer to Appendix A for detailed substrate drawings over steel.

Return to Table of Contents

#### Installing the Atlas Stone Large Format Tiles

Make certain the back of each tile is free of dirt, sand, or loose particles. When necessary, wash them completely. If the back of the tile is dry, dampen it first with a wet sponge, but do not saturate. This prevents the naturalstone from pulling the moisture from the adhesive, allowing it to cure naturally and with a stronger bond.

Select a tile thinset adhesive that meets or exceeds ANSI 118.4 and 118.11 standards, and mix per the manufacturer's instructions. When laying Atlas Stone Large Format Tiles it is necessary to start the bottom row on a level line in order to maintain consistent levels in each row as you work up the wall. Always start installing ATLAS at the bottom row, and start each row at an outside corner if one exists. It is also important that they rest on a secure base such as a concrete floor or footing to help carry the weight until the thinset has fully set.

Atlas Stone Large Format Tiles can be laid in a variety of patterns to suit the design of the project. Most typical is a randomized, staggered fashion, in an effort to minimize any vertical seams lining up from one course to the next. However, the loose nature of this tile product allows for it to be laid in many other patterns including straight stacks, symmetrical / asymmetrical columns, vertically, herringbone, and many others. It's recommend to lay out the pattern in a large area before installing on the wall to ensure the desired look is achieved.

When fixing the tiles to the wall use a generous amount of recommended tile thinset adhesive and apply it to the back of each tile and to the wall. Screed the tile adhesive on to the wall using a 1/2" square notch trowel and then lightly back butter the back of each tile as its being set. By applying the adhesive to the back of each tile and to the wall, this ensures the maximum possible adhesion to your wall surface, as all the gaps, voids and cracks are filled.


Press each tile into the adhesive, rotating slightly, forcing some of the adhesive to squeeze out freely. Any adhesive forced out beyond the finished joint or on the panel surface itself must be removed before the adhesive is allowed to set. Be sure not to allow any adhesive to harden on the face of the panels as this will help in the cleanup process. Tight joints will provide a neat appearance, but Atlas Stone Large Format Tiles can also be set using a grout joint between the tiles to achieve a different look.

#### **How to Address Corners**

Outside 90 degree corners can be handled either by [1] miter cutting individual tiles or [2] using an overlapping corner technique where the cut edge of each tile alternates position as you work your way from course to course. The overlapping technique is only

Atlas Stone by Norstone Large Format Tile Installation Guide

possible with the Lavarock color since the cut edge will have the same finish as the face of the tile. See photo below for details. Miter-cuts should be used in all off-angle (45°, 60°, etc) corner applications.

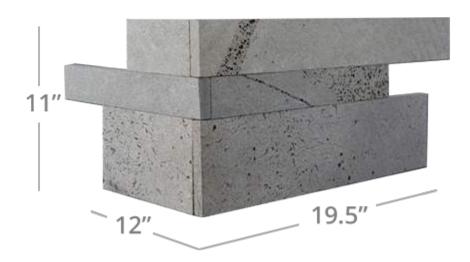

#### Special Note on Moisture Rich Environments and Freeze Thaw Climates

Natural stone is an excellent choice of building material for any environment and climate, be it interior or exterior, adjacent or completely submerged in water, desert hot or polar cold. Certain products should be used and procedures followed in some of these environments, as noted below:

**Moisture Rich Environments** – It is critical that a waterproofing membrane meeting or exceeding ANSI 118.10 standards be applied between the substrate and tile adhesive to form a waterproof barrier. This will ensure moisture will not reach the substrate material and potentially degrade its ability to support the tile installation.

**Pool Applications** – It is especially important to **thoroughly seal** your pool application; note that you may be required to **re-seal** your pool application more frequently than other areas of your project. **We recommend re-sealing your pool application every 18-24 months**, or sooner if you notice your sealer has worn off or any adverse affect to your stone.

**Freeze / Thaw Climates** – Atlas Stone Large Format Tiles will not be affected at all by the normal freezing and thawing of the climate which they are exposed to, however, the same cannot be said about the substrate to which they are applied. It is critical that a waterproof / anti-fracture membrane meeting or

exceeding ANSI 118.10 standards be applied between the substrate and tile adhesive to form a water and fracture proof barrier, capable of resisting substrate movement during freeze thaw cycles.

#### Return to Table of Contents

#### Post Installation Guidelines Cleaning

Work carefully and meticulously, to avoid adhesive dropping onto the tiles during installation. Should some thinset find its way onto the face of a tiles, allow it to dry until it is crumbly, then pick it off carefully, and use a soft bristle brush to lightly clean the spot where the adhesive may have left a slight mark.

Excess dirt and film may be removed using clean water and a soft bristle brush. It is important not to allow excessive adhesive to dry on face of the tiles. Carefully remove it with a damp rag prior to it hardening.

**WARNING:** Acidic cleaning agents must not be used under any circumstances as this will cause unnecessary damage to natural stone and void any warranty.

#### Sealing

Natural Stone products must be sealed with a good quality penetrating sealer for all exterior applications. Always test the sealer on an off-cut or in an inconspicuous place on the finished stone wall before applying to the entire stone surface.

Follow the manufacturer's instructions regarding the application of the sealer. Sealed stone may be easier to keep clean than unsealed stone and certain sealers also repel stains. However, sealers must be periodically reapplied, especially on exterior applications, and could alter the natural coloring of the stone.

If you've installed Atlas Stone Large Format Tiles in a pool, it will be important to re-seal your application periodically. We recommend every 18-24 months, or whenever you notice that your sealer has worn off. This maintenance will ensure the stone stays stable and in good condition.

#### **Ongoing Maintenance**

Though natural stone will last many lifetimes, routine maintenance may be required from time to time. Depending on the application – as with any wall finish - various types of scaling or build-up may occur. Should you experience a need to clean your Atlas Stone Large Format Tiles please adhere to the following recommendations:

- 1. Regular dusting for interior applications and hose washing for exterior applications is recommended.
- 2. In the event that cleaning agents are needed, please select a natural detergent that is non-corrosive and non-acidic to remove build-up in problem areas. Test your detergent in an inconspicuous place to verify compatibility and results.

3. In some cases, a low grade pressure wash may be used. However, the stone should never be exposed to a direct angle of attack from the nozzle. Note that up-close attack from a pressure washer may corrode the stone, so please stand a minimum of 5 feet away when pressure washing.

#### WARNING

#### Please DO NOT:

- 1. Acid wash the stone.
- 2. High-Pressure Wash the stone (directly or indirectly).
- 3. Use any sharp object, such as a steel scraper, knife, or screwdriver, to remove stubborn deposits from the face of the stone. This can result in damage to the natural texture of the product.

Return to Table of Contents

#### Disclaimer

This Installation Guide is intended for general informational purposes only and should not be considered as professional technical or legal advice. It is designed as a reference only and shall not be construed as a substitute to seeking professional advice relevant to your particular circumstances to evaluate its accuracy, completeness and relevance for your specified application, or employing professional and licensed contractors to install Norstone Products. Therefore Norstone does not take any responsibility for any error or misinformation that may be contained within this guide.

Return to Table of Contents

© 2018 Norstone USA 11/28/2018

Atlas Stone by Norstone Large Format Tile Installation Guide

#### Warranty

# Norstone USA, INC, Norstone Companies & Distributors, Rassan Trading Inc. — Limited Warranty

Subject to these terms and conditions, Norstone USA, Inc. and all its subsidiaries and affiliates ("Norstone & Companies") warrants its products for a period of fifty (50) years from the date of original purchase from Norstone & Companies against manufacturing defects when used on a structure which confirms to all building codes and regulations and when installed in accordance with Norstone & Companies' instruction, specifications and guidelines. In the event of a defect, Norstone & Companies will credit the cost of the products purchased or, at Norstone & Companies' option, repair or provide new products to replace any products determined to be defective. This warranty is limited to the original purchaser and may not be transferred to any subsequent owner. This limited warranty does not cover damage from: a) settlement of the building or improvement or other structural movements; b) contact with chemicals or paint; c) deterioration or discoloration due to airborne contaminants; or d) staining or oxidation. This limited warranty covers only manufacturing defects in Norstone & Companies products. Norstone & Companies are not responsible for labor costs in removal and replacement of defective products.

THIS LIMITED WARRANTY DOES NOT COVER, AND SHALL AUTOMATICALLY BECOME NULL AND VOID, FOR THE FOLLOWING REASONS: (i) ABUSE; (ii) MISUSE; (iii) ACCIDENT; (iv) IMPROPER INSTALLATION, APPLICATION OR MAINTENANCE; (v) FAILURE TO NOTIFY NORSTONE & COMPANIES OF A CLAIMED COVERED DEFECT IMMEDIATELY WHEN NOTICED; OR (vi) FAILURE TO USE THE PRODUCTS IN ACCORDANCE WITH NORSTONE & COMPANIES' INSTRUCTIONS, SPECIFICATIONS AND GUIDELINES. THIS WARRANTY IS EXCLUSIVE, AND EXCEPT AS EXPRESSLY SET FORTH HEREIN, NORSTONE & COMPANIES' MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, AND DISCLAIMS ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICU- LAR PURPOSE. IN ANY EVENT, THE SOLE REMEDY OF THE ORIGINAL PURCHASER SHALL BE A CREDIT FOR THE COST OF THE PRODUCTS PURCHASED FROM NORSTONE & COMPANIES' OR, AT NORSTONE & COMPANIES' OPTION, REPAIR OR REPLACEMENT OF SUCH PRODUCTS. NORSTONE & COMPANIES SHALL UNDER NO CIRCUMSTANCES, WHETHER FOR A FAILURE OF ITS LIMITED WARRANTY OR OTHERWISE. BE LIABLE TO BUYER OR OTHERWISE FOR SPECIAL, INCIDENTAL. DIRECT, PUNITIVE, OR CONSEQUENTIAL DAMAGES, OR FOR DAMAGES IN EXCESS OF ANY AMOUNTS PAID TO NORSTONE & COMPANIES HEREUNDER. NO WAIVER, ALTERATION, ADDITION OR MODIFICATION OF THE FOREGOING CONDITIONS SHALL BE VALID UNLESS. MADE IN WRITING AND SIGNED BY AN OFFICER OF NORSTONE & COMPANIES.

Return to Table of Contents

© 2018 Norstone USA 11/28/2018

Atlas Stone by Norstone Large Format Tile Installation Guide

## Appendix A – Substrate Detail

Appendix A details proper installation procedures over various substrates in both interior and exterior applications. Please direct all questions to your local Norstone office at 866-717-4548.

Open Stud – cement board – Exterior	13
Open Stud – Lathe and Mortar – Exterior	14
Open Stud – Interior	15
Concrete	16
Steel – Epoxy Adhesive	17
Steel – Lathe and Mortar	18

Return to Table of Contents

